Glendale, CA 91201



627 Ruberta Avenue Phone: (818) 291-0338 Email: armen@hyetechllc.com

Fax: (818) 291-0339 om Web: www.hyetechllc.com

# **Positioning Plug**

For Model Eligibility, Please visit us at www.hyetechllc.com

**Subject:** Removal, cleaning, inspection, and installation procedures for 23009573HT – Turbine

Nozzle Shield Positioning Plug.

**Compliance:** Any time it is necessary.

**Notes:** Refer to OEM's published for data engine operation.

Technical aspects are FAA approved

Standard shop practices may be substituted for materials and procedures referenced herein provided they have been demonstrated as effective and safe for use with these parts or their OEM and other FAA approved equivalents.

### 1.0 REMOVAL

- 1.1 Remove the turbine assembly in accordance with the manufacturer's instructions.
- 1.2 Disassemble turbine assembly in accordance with the manufacturer's instructions.
- 1.3 Remove lock-wire and remove the positioning plug.

### 2.0 CLEANING

- 2.1 Clean in alkaline liquid bath or soft grit blast.
  - 2.1.1 Soak the part of 30 60 minutes in an alkaline bath at approximately 200° F. The bath shall contain 20 ounces alkaline rust remover (MIL-D-26549 or equivalent) per gallon of water. Rinse in a high pressure water spray followed by an overflowing dip rinse in 170°F (approx) water.

## 3.0 INSPECTION

3.1 Inspect and repair or replace the plug per Table 1:

Issued: August 10, 2007



Glendale, CA 91201




627 Ruberta Avenue Phone: (818) 291-0338

Email: <u>armen@hyetechllc.com</u> Web: <u>ww</u>

Fax: (818) 291-0339 Web: <a href="https://www.hyetechllc.com">www.hyetechllc.com</a>

Table 1
 
| Condition           | Service Limit          | Repair Limit | Corrective Action |
|---------------------|------------------------|--------------|-------------------|
| Any visual damage   | 0.010 in. max surface  | No repair.   | Replace part.     |
| (thread damage or   | fretting wear (Dia. A) |              |                   |
| fretting). (Visual) |                        |              |                   |



### 4.0 REPAIR

4.1 None

# 5.0 INSTALLATION

5.1 Install the first-stage turbine nozzle shield. Apply anti-seize compound, Never Seez High temperature lubricant or equivalent, to the threads and install the two positioning plugs. Tighten plugs to 100 to 150 in lb and secure with lock-wire, MS20995C20 or equivalent.

Issued: August 10, 2007